

CANDY FLOSS MACHINE **INSTRUCTIONS**

Add floss sugar only while motor is not running.

Whenever you add floss sugar to the head, always fill head about 90% full.

Hand rotate head to spread floss sugar evenly. This will eliminate excessive head vibration.

DO NOT OVERFILL.

Put candy floss cone while machine is making the floss. Wind the web of the sugar onto the cone.

Do NOT use an extension cord other than heavy-duty industrial.