

Beverage Fountains

NOTE: The fountain must be properly grounded to prevent electrical shock. Beverage Fountains are designed to circulate clear beverages. Use of beverages with pulp, seeds, fruit, rinds, etc. will restrict the flow of beverage and potentially clog the motor.

Operating Instructions:

- Plug fountain in to grounded electrical outlet
- Fill fountain with approximately 2 quarts of your choice of punch or champagne

(Be sure not to use punch with pulp as it will clog the motor and prevent fountain from working)

- Turn switch at the bottom to on position and fountain will start to work (it takes about one minute for the punch to make its' way to the top)
- Be sure to keep punch at a level above the motor to ensure it doesn't run dry
- When finished empty contents of fountain and return to Pat's Party Rentals on your scheduled date

DO NOT ATTEMPT TO CLEAN OR DISMANTLE FOUNTAIN IN ANY WAY

Helpful Hints:

- To chill a beverage, use chunks of ice in the bowl, or ice cubes sealed in a plastic bag to prevent dilution of punch
- Pre-cool beverage whenever possible
- Carbonation will dissipate after 10 to 20 minutes of re-circulating in the fountain

(Add smaller quantities of the mixtures from time to time to maintain carbonation)